
In-Wall Valve Rough Installation Guide

PRECISION CRAFTED

IGM/

1/2" & 3/4" In-Line Shut-Off Valves

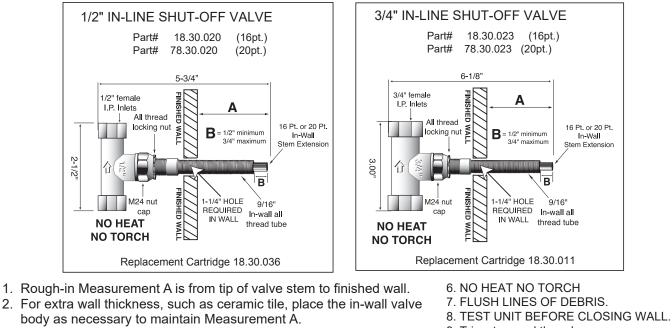

- 3. Never use an exit as an inlet; Never use an inlet as an exit.
- 4. Check ports for markings.


FORM SIG

5. See the bottom of PG.2 for heavy handle adjustment.

- 9. Trim stem and threads as necessary.


10. UPC REQUIRES ACCESS TO MECHANICAL JOINTS.

Style/Design Use two digit number below as center number in product code (example 72- <u>74</u> -77.)	Measurement A	_
Group 1 (20pt Only) Carina (28), Carina X (30), Ceres II (50), Nova II (48), Polaris II (49), Prana (92), Stella (07), Stella X (08), Capella (97), Capella X (98), Tribeca (29), Tribeca X (39)	1-1/2"	
Group 2 (16pt & 20pt) 16pt: Aria (01), Ascot (77), Seville (12), Sussex (78), Waldorf (76) 20pt: Lisse (83), Regent (53), Regent X (54), Tremont (61)	1-3/4"	
Group 3 (16pt Only) Palermo (44)	2"	
Group 4 (16pt Only) Bordeaux (64), Devon (45), Georgian (41), Huntington (27), Jefferson Elite (02), Loire (56), Luxembourg (65), Madison Elite (40), Monte Carlo (59), Orleans (57), St. Michel (55), Toronto (20), Venezia (25)	2-1/4"	
Group 5 (16pt Only) Salem (09), Windham (10)	2-3/8"	
Group 6 (16pt Only) Charlotte (04), Charlotte Elite (05), Lexington (03), Lira (82), Mallorca (75), Maya (80), Moderne (93), Moderne X (94), New Hampton (43), Portsmouth (06), Valencia (74)	2-1/2"	
Group 7 (16pt Only) Harlow (60)	2-5/8"	
Group 8 (16pt Only) Alexandria (14), Chicago (85), Hampshire (13), Houston (81), Montreal (17)	2-3/4"	
Group 9 (16pt Only) Siena (79)	3"	
Group 10 (20pt Only) LOW-PROFILE HANDLES Nuance (38), Mixx (32), Jaxx (33), Stixx (95) FLIP TO PG. 2 FOR INSTALLATION	SEE PG. 2	
NOTICE: These instructions do not represent step-by-step directions. They are a product supplement only to be used by a qualified/licensed plumber. We recommend all plumbing fixtures be installed by a professional.		
American Faucet & Coatings Corporation		03/17/2023 CC

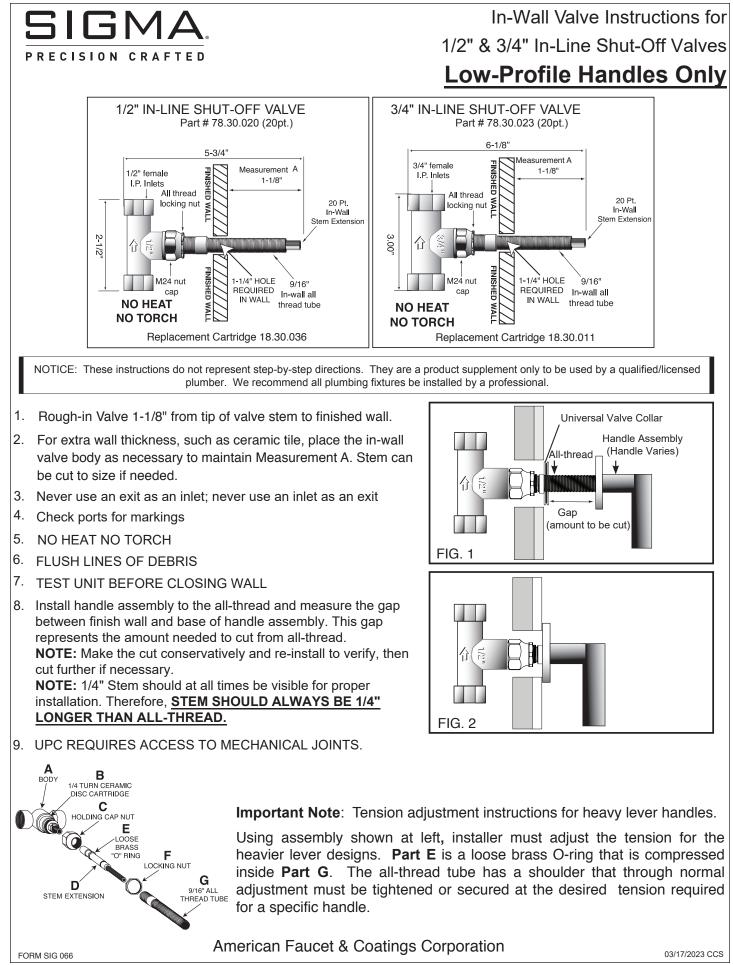

GM In-Wall Valve Rough Installation Guide **RECISION CRAFTED** 3-Port & 4-Port In-Wall Diverter 6-1/2" 6-7/8 **IN-WALL ADAPTER** NOTE: Trickle-flow valves NUT IN-WALL ADAPTER NUT 1/2" NPT MALE require separate shut-off. 1/2" NPT FEMALE INLET OUTLETS INISHED SINI E OUTLET WAL WAL ALL-THREAD TUBE LL-THREAD TUB 3-1/2" Install through 1-1/2" hole to 3-1/2" allow for future maintenance 16 or 20 PT 16 or 20 PT. kÍNG FINISH STEM EXTENSION STEM EXTENSION FINISHED NUT 1/2" NPT INS. OUTLET 卣 IPT MALE 1/2" NPT MALE WAL WAL INLET NO HEAT NO TORCH NO HEAT NO TORCH **3 PORT IN-WALL DIVERTER 4 PORT IN-WALL DIVERTER** (2 functions with positive shut-off) (3 functions with positive shut-off) Part # 18.30.253 (16pt.) Part # 78.30.253 (20pt.) Part # 18.30.255 (16pt.) Part# 78.30.255 (20pt.) (3 functions with trickle-flow) (2 functions with trickle-flow) Part # 18.30.252 (16pt.) Part # 78.30.252 (20pt.) Part# 18.30.254 (16pt.) Part# 78.30.254 (20pt.) 1. Rough-in Measurement A is from tip of valve stem to finished wall. 6. All connections are 1/2" NPT. 2. For extra wall thickness, such as ceramic tile, place the in-wall 7. NO HEAT - NO TORCH. valve body as necessary to maintain Measurement A. 8. FLUSH LINES OF DEBRIS. 3. Check ports for markings. 9. TEST UNIT BEFORE CLOSING WALL. One exit may be plugged if not required on 4 port valve. Trim stem and all-thread as necessary. 10. 4. NEVER use an exit as an inlet; NEVER use an inlet as an exit. 11. UPC requires access to mechanical joints. 5. See note on PG. 4 for heavy handle adjustment. Style/Design Measurement A Use two digit number below as center number in product code (example 72-74-77.) Group 1 (20pt Only) 1-1/2" Carina (28), Carina X (30), Ceres II (50), Nova II (48), Polaris II (49), Prana (92), Stella (07), Stella X (08), Capella (97), Capella X (98), Tribeca (29), Tribeca X (39) Group 2 (16pt & 20pt) 16pt: Aria (01), Ascot (77), Seville (12), Sussex (78), Waldorf (76) 1-3/4" 20pt: Lisse (83), Regent (53), Regent X (54), Tremont (61) Group 3 (16pt Only) 2" Palermo (44) Group 4 (16pt Only) Bordeaux (64), Devon (45), Georgian (41), Huntington (27), Jefferson Elite (02), Loire (56), Luxemboura (65). 2-1/4" Madison Elite (40), Monte Carlo (59), Orleans (57), St. Michel (55), Toronto (20), Venezia (25) Group 5 (16pt Only) 2-3/8" Salem (09), Windham (10) Group 6 (16pt Only) Charlotte (04), Charlotte Elite (05), Lexington (03), Lira (82), Mallorca (75), Maya (80), Moderne (93), 2-1/2" Moderne X (94), New Hampton (43), Portsmouth (06), Valencia (74) Group 7 (16pt Only) 2-5/8" Harlow (60) Group 8 (16pt Only) 2-3/4" Alexandria (14), Chicago (85), Hampshire (13), Houston (81), Montreal (17) Group 9 (16pt Only) 3" Siena (79) Group 10 (20pt Only) LOW-PROFILE HANDLES FLIP TO PG. 4 FOR INSTALLATION SEE PG. 4 Nuance (38), Mixx (32), Jaxx (33), Stixx (95) NOTICE: These instructions do not represent step-by-step directions. They are a product supplement only to be used by a qualified/licensed plumber. We recommend all plumbing fixtures be installed by a professional.

American Faucet & Coatings Corporation

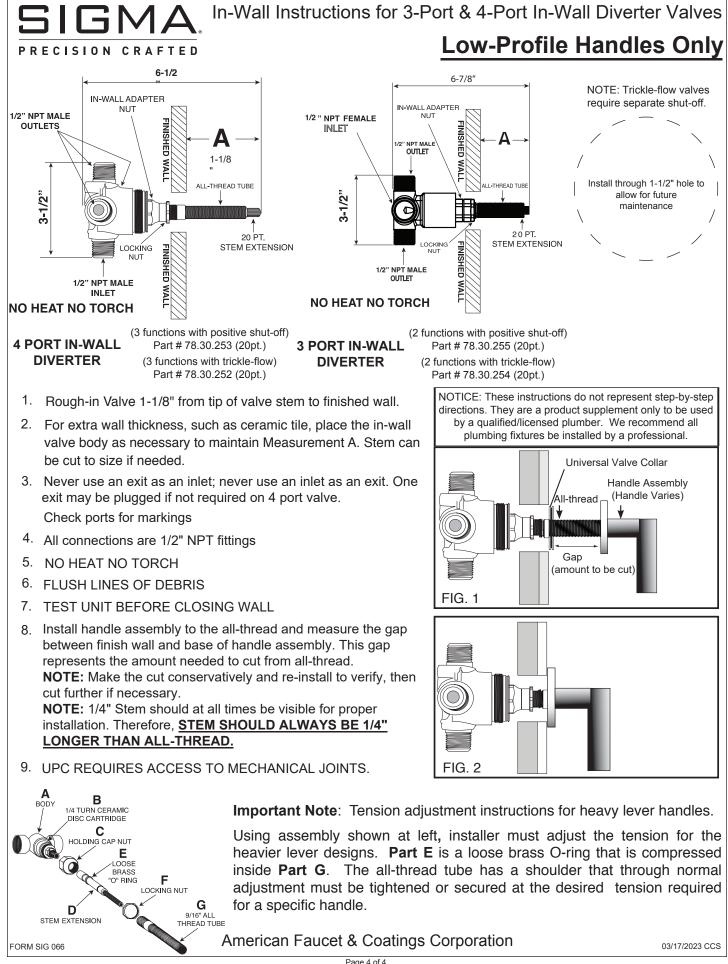

Page 4 of 4

AMERICAN

AMERICAN FAUCET & COATINGS CORPORATION LIMITED PRODUCT WARRANTY



Product/Finish Warranty: American Faucet & Coatings Corporation warrants that products are free from defects in materials and workmanship for five (5) years from date of invoice. In addition, our Finish Warranty provides limited LIFETIME coverage for Chrome & PVD finishes, five (5) years for Omega powder coated finishes. Living finishes are war-ranted for workmanship only. If any material proves to be defective after inspection by our company, it will be repaired or replaced at our discretion at no charge. However, no claims for labor, shipping costs, or consequential damages will be accepted.

What we will do: We will restore any product whose finish proves to be defective back to its original finish at no charge during the appropriate warranty period stated above. Proof of purchase must be provided. After the warranty period, American Faucet and Coatings Corporation will refinish any of its faucets at the prevailing appropriate charge.

What you must do: The faucets must be properly installed according to our instructions and specifications & are for residential use only. The faucets cannot be altered in any way. You must maintain and clean the faucets in accordance with the instructions provided with the product. You must use the faucet(s) for residential use only.

How to obtain service: Contact our customer service by calling 800.960.BATH or send an email to customerservice@sigmafaucet.com. Please have you model number and proof of purchase available so we can better assist you.

We will then respond and take appropriate action. Do not send us any part(s) of your faucet(s) or its various connecting hoses unless we have contacted you and have sent you an approved RGA form. All transportation charges for returned goods must be paid by the customer.

What is not covered: This warranty does not cover the crystal/glass, or porcelain products of any faucet or the drain assembly or aerator on other than the Chrome or PVD finishes. This warranty also does not cover damage caused by accident, alterations, misuse, abuse, normal wear and tear, lime deposits, direct exposure to salty air or corrosive materials, or the color change that takes place with the passage of time, or use in any manner contrary to American Faucet and Coatings Corporation's printed instructions. In the case of in-the-wall installations American Faucet and Coatings Corp. will assume no liability if there is no access. In no event will we be liable for labor of any kind, incidental or consequential damages. This warranty is extended in lieu of all other expressed or implied warranties, whether oral or written. Many installation compounds are harmful to brass and metal finishes. The use of any lead-based or acidic curing adhesive, silicone, mastic, or plumber's putty on or near our finished products will void the finish warranty. Use only sealants which are neutral curing and are not reactive with metal and brass finishes. American Faucet & Coatings Corporation reserves the right to change, modify or alter its products as deemed necessary. This warranty super-sedes any other American Faucet & Coatings Corporation warranties, whether oral or written.

Unless otherwise contrary to state law governing the purchase, American Faucet and Coatings Corporation's liability will not exceed the wholesale price for the American Faucet and Coatings Corporation product considered defective. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow exclusion of incidental or consequential damages, so the above limitation may not apply to you.

LIFETIME WARRANTY ON 1/4 TURN CERAMIC DISC CARTRIDGE

Should the ceramic disc cartridge in your faucet ever fail, American Faucet & Coatings Corporation will replace the failed part free of charge to the original purchaser of the product. Shipping and handling charges will apply. Labor not included. When ordering replacements, denote for widespread or centerset lavatory, Roman Tub, or other. Include age of faucet. (This does not include thermostatic, pressure balance, or diverter cartridges.)

CONSUMER WARNING CALIFORNIA PROPOSTION 65 WARNING

Among other chemicals known to cause harm, this faucet contains lead, a chemical known to the State of California to cause birth defects or other reproductive harm.

All faucets and products made of leaded brass alloys, even those that comply with U.S. Environmental Protection Agency regulations, contribute small amounts of lead to water that is allowed to stand in contact with the brass. This faucet complies with all E.P.A. regulations regarding the amount of lead used in plumbing brass and solder. The amount of lead contributed by any faucet is highest when the faucet is new. The following steps will reduce potential for exposure to lead from faucets and other parts of the plumbing system:

- Always run the water for a few seconds prior to use for drinking or cooking.
- · Use only cold water for drinking or cooking.
- If you wish to flush the entire plumbing system of water that has been standing in the pipes or other fittings, run the cold water until the temperature of the water drops, indicating water coming from the outside main.
- If you are concerned about lead in your water, have your water tested.