

Single Hole Floor Mounted Tub Filler Installation Instructions

PLEASE INSPECT PRODUCT PRIOR TO INSTALLING. Carefully review all pre-assembled parts. It will be necessary for the various parts to be re-assembled exactly as shown. **NOTICE:** These instructions do not represent step-by-step directions. They are a product supplement only to be used by a qualified/licensed plumber. We recommend all plumbing fixtures be installed by a professional.

Specifications

Minimum operating pressure	20 psi
Maximum operating pressure	125 psi
Hot and cold water inlets	½" NPSM female
Flow capacity	6.5 GPM / 60 psi

GENERAL INSTRUCTIONS

1. ALWAYS flush lines of debris.
2. Apply teflon tape to threaded areas if applicable.
3. Install trim after completion to avoid damage from following trades personnel. (See handle trim installation for details)
4. WARRANTY IS INVALID if iron pipe is used to connect Rough-In valve or if Rough-In valve is improperly grounded.
5. TEST VALVES AND LINES BEFORE CLOSING DECK.

ROUGH-IN VALVE INSTALLATION

Making The Mounting Holes (See Fig. 1)

1. Place Rough-In valve in desired location, ensuring HOT inlet is towards the tub.
2. Use bull's eye bubble level to ensure the Rough-In valve is level.
3. Using Rough-In valve, indicate four drill holes making sure valve is square to tub.
4. Remove Rough-In valve and use 3/16" drill bit to drill four holes approximately 1.80" deep.

Mounting The Rough-In Valve (See Fig. 2)

1. Place four covered bolts in mounting holes.
2. Place Rough-In valve over covered bolts.
3. Place washer, lock washer, and nut on each bolt.
4. While pressing down on valve, tighten nuts ensuring that valve is installed level.

Making The Mounting Holes

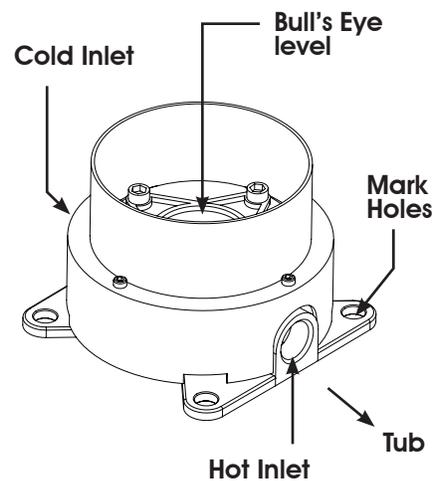


Fig. 1

Mounting The Rough-In Valve

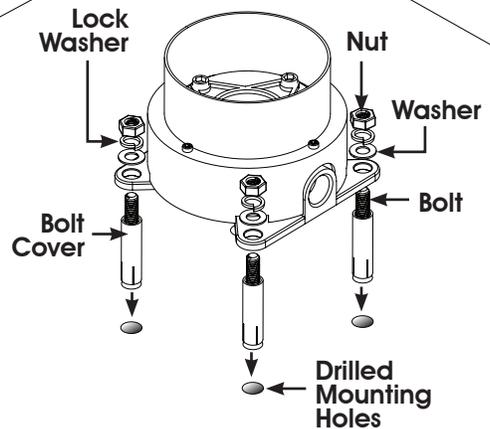



Fig. 2

Flooring Pressure Test (See Fig. 3)

1. Plumb Hot and Cold inlets using 1/2" NPT fittings.
2. Perform a flooring pressure test to ensure there are no leaks.


Warning: Do not leave inlets pressurized for long periods of time. Plastic Guard is designed to check connections for leaks only. Turn off water supply after leak inspection until trim is installed.

NOTE: Independent shut offs are recommended upstream of rough valves, these are supplied by others.

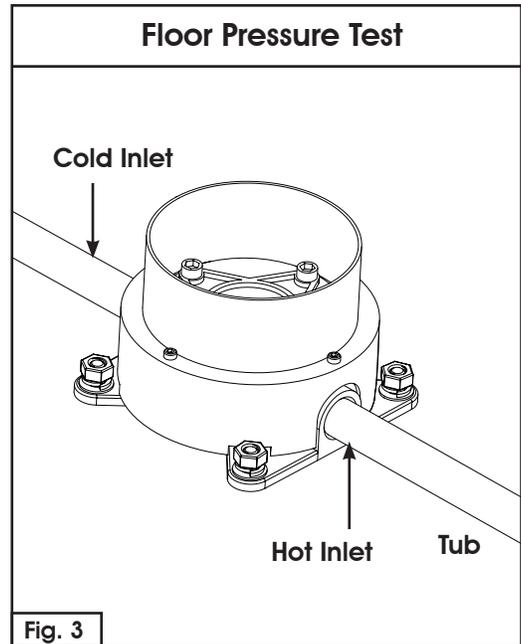

Floor Installation (See Fig. 4)

1. Install floor (minimum floor thickness is 1/2", suggested floor thickness is 1-1/2").
2. Cut excess mud guard extruding from finished floor.
3. If thicker floor is desired, ensure finished floor has a $\varnothing 3.9"$ hole directly above the mud guard.

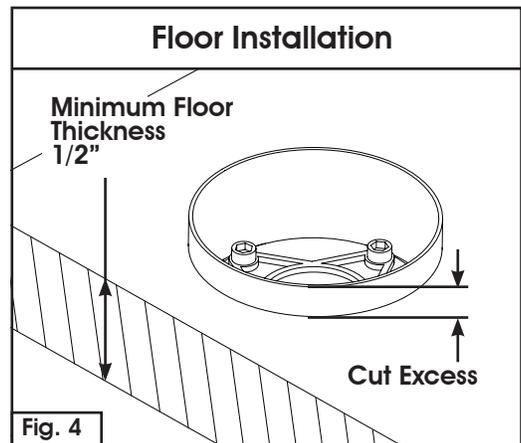


Remove Plastic Guard (See Fig. 5)

1. Remove Bolts and screw large bolts into plastic guard (will be tight fit). Use bolts to remove plastic guard.

NOTE: Save plastic guard and small bolts for home owner. Plastic guard can be used later to plug valve for maintenance.

Warning: Do not leave inlets pressurized for long periods of time. Plastic Guard is designed to check connections for leaks only. Turn off water supply after leak inspection until trim is installed.

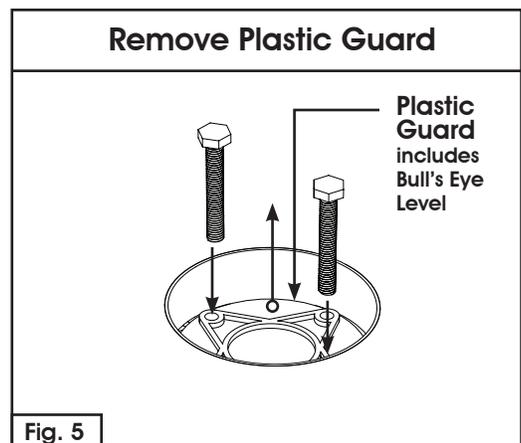

TRIM INSTALLATION




Mounting Plate (See Fig. 6)

1. Slide base flange onto riser.
2. Make sure preattached riser insert's opening is parallel to mounting plate inlets and hot Inlet is facing tub.
3. Secure mounting plate to riser insert with two bolts.

Tub Filler Installation (See Fig. 7)

1. Install valve insert into Rough-In valve. The insert's outlets must be in line with Rough-In valve inlets (HOT TOWARDS TUB).
Note: Inlets will be marked with a red (Hot) and blue (cold) dot next to the inlet.
2. Aligning matching colors, attach tub filler assembly to Rough-In valve and secure with four bolts.
3. Slide down base flange if necessary.

NOTE: Water test system and check for leaks.

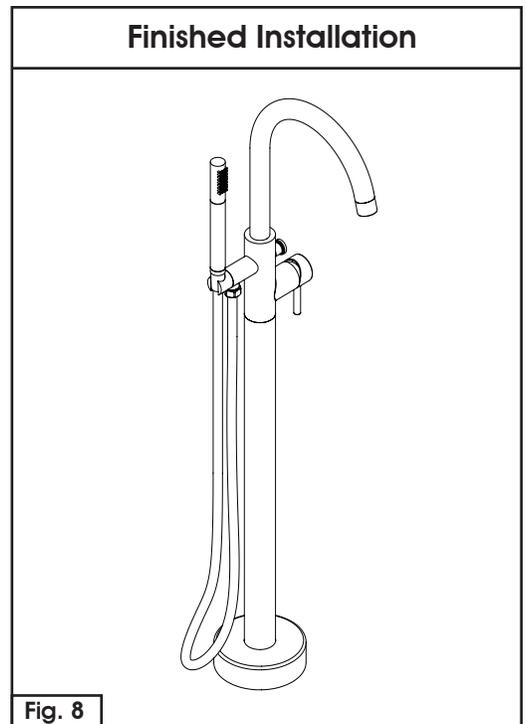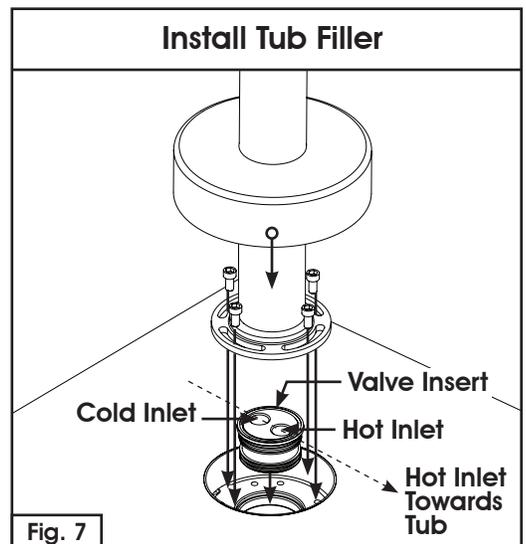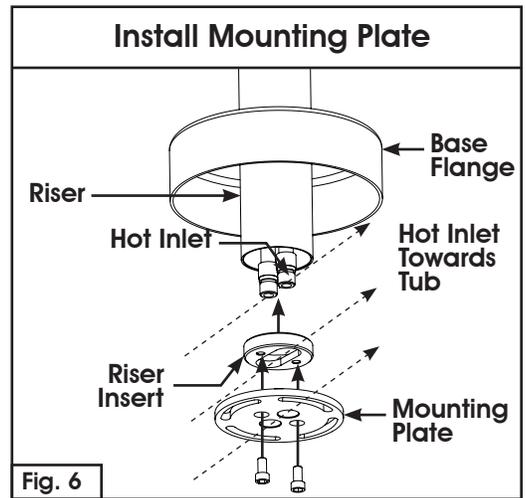

Product/Finish Warranty: American Faucet & Coatings Corporation warrants that products are free from defects in materials and workmanship for five (5) years from date of invoice. In addition, our Finish Warranty provides limited LIFETIME coverage for Chrome & PVD finishes, five (5) years for Omega powder coated finishes & Polished Gold. Living finishes are warranted for workmanship only. If any material proves to be defective after inspection by our company, it will be repaired or replaced at our discretion at no charge. However, no claims for labor, shipping costs, or consequential damages will be accepted.

What we will do: We will restore any product whose finish proves to be defective back to its original finish at no charge during the appropriate warranty period stated above. Proof of purchase must be provided. After the warranty period, American Faucet and Coatings Corporation will refinish any of its faucets at the prevailing appropriate charge.

What you must do: The faucets must be properly installed according to our instructions and specifications & are for residential use only. The faucets cannot be altered in any way. You must maintain and clean the faucets in accordance with the instructions provided with the product. You must use the faucet(s) for residential use only.

How to obtain service: Send your name, address, and telephone number along with a statement describing the nature of the problem and your paid sales slip or other proof of purchase to:

**American Faucet & Coatings Corporation
3280 Corporate View
Vista, CA 92081**

We will then contact you and take appropriate action. Do not send us any part(s) of your faucet(s) or its various connecting hoses unless we have contacted you and have sent you an approved RGA form. All transportation charges for returned goods must be paid by the customer.

What is not covered: This warranty does not cover the crystal/glass, or porcelain products of any faucet or the drain assembly or aerator on other than the Chrome or PVD finishes. This warranty also does not cover damage caused by accident, alterations, misuse, abuse, normal wear and tear, lime deposits, direct exposure to salty air or corrosive materials, or the color change that takes place with the passage of time, or use in any manner contrary to American Faucet and Coatings Corporation's printed instructions. In the case of in-the-wall installations American Faucet and Coatings Corp. will assume no liability if there is no access. **In no event will we be liable for labor of any kind, incidental or consequential damages.** This warranty is extended in lieu of all other expressed or implied warranties, whether oral or written. **Many installation compounds are harmful to brass and metal finishes. The use of any lead-based or acidic curing adhesive, silicone, mastic, or plumber's putty on or near our finished products will void the finish warranty. Use only sealants which are neutral curing and are not reactive with metal and brass finishes.** American Faucet & Coatings Corporation reserves the right to change, modify or alter its products as deemed necessary. This warranty supersedes any other American Faucet & Coatings Corporation warranties, whether oral or written.

Unless otherwise contrary to state law governing the purchase, American Faucet and Coatings Corporation's liability will not exceed the wholesale price for the American Faucet and Coatings Corporation product considered defective. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow exclusion of incidental or consequential damages, so the above limitation may not apply to you.

LIFETIME WARRANTY ON 1/4 TURN CERAMIC DISC CARTRIDGE

Should the ceramic disc cartridge in your faucet ever fail, American Faucet & Coatings Corporation will replace the failed part free of charge to the original purchaser of the product. Your cost will be a \$15.95 handling and mailing charge. Labor not included. When ordering replacements, denote for widespread or centerset lavatory, Roman Tub, or other. Include age of faucet. (This does not include thermostatic, pressure balance, kitchen or diverter cartridges.)

**CONSUMER WARNING
CALIFORNIA PROPOSITION 65 WARNING**

Among other chemicals known to cause harm, this faucet contains lead, a chemical known to the State of California to cause birth defects or other reproductive harm.

All faucets and products made of leaded brass alloys, even those that comply with U.S. Environmental Protection Agency regulations, contribute small amounts of lead to water that is allowed to stand in contact with the brass. This faucet complies with all E.P.A. regulations regarding the amount of lead used in plumbing brass and solder. The amount of lead contributed by any faucet is highest when the faucet is new. The following steps will reduce potential for exposure to lead from faucets and other parts of the plumbing system:

- Always run the water for a few seconds prior to use for drinking or cooking.
- Use only cold water for drinking or cooking.
- If you wish to flush the entire plumbing system of water that has been standing in the pipes or other fittings, run the cold water until the temperature of the water drops, indicating water coming from the outside main.
- If you are concerned about lead in your water, have your water tested.

American Faucet & Coatings Corporation